




IBS-Parts Cleaning Device

Type M, Typ M-500, Typ MD



Description

Device in workbench height with a large work surface, for cleaning of particularly large and heavy parts..

Article-No.

Typ M	Typ M-500, Heavy-duty version	Typ MD, with lid
2120003	2120404	2120301
 	 	 
	<div style="border: 2px dashed orange; padding: 5px; display: inline-block;"> Heavy-duty version </div> 	

Brief info load & tank capacity

Function

By pressing the foot switch the self priming IBS-Special Pump moves the cleaner from the drum through the pipe to the brush. During the manual cleaning process fresh liquid is flowing out and the soiled liquid flows back into the barrel. The heavy dirt particles fall down to the bottom of the barrel. The pump sucks fresh cleaning agent from the middle of the drum. An extended service life of the special cleaner is ensured. The drum with the dirty liquid is simply replaced with a drum containing fresh IBS-Special Cleaning Agent.

Advantage

<ul style="list-style-type: none"> · industrial design 	<p>The fitted cover / lid protects the work surface (closed) and is an additional spill guard (open).</p>
<ul style="list-style-type: none"> · for cleaning of particularly large and heavy parts · robust & solid construction · 3 years warranty for device and pump when used in combination with IBS-Special Cleaning Agents 	

Optional accessories

Collecting Tray	2120022	Collecting Tray	2120022	Collecting Tray	2120022
Exhaust System	2120013	Exhaust System	2120013		
Splash Guard	2222066				


Technical Data

	Type M	Type M-500	Type MD
Overall dimensions:	1145 x 670 x 1050 mm	1145 x 670 x 1050 mm	1165 x 695 x 1055 mm / open 1735 mm
Work surface:	1135 x 660 mm	1135 x 660 mm	1135 x 660 mm
Work height:	870 mm	870 mm	870 mm
Load capacity:	250 kg	500 kg	250 kg
Max. container size:	200 liter barrel	200 liter barrel	200 liter barrel
Power connection:	230 V, 50 Hz	230 V, 50 Hz	230 V, 50 Hz
Weight (without barrel):	47 kg		60 kg





ACCESSORIES

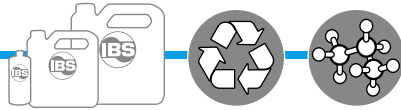


IBS-Special Cleaner		fast evaporation	slow evaporation	nearly odourless	mild odour	Available packaging sizes, Article No.						
	IBS-Special Cleaner EL/Extra	+		+		2050149	2050121	2050113	2050128	2050105	2050061	2050101
	IBS-Special Cleaner RF		+		+		2050124	2050097	2050129	2050056	2050059	2050263
	IBS-Special Cleaner Purgasol	+			+		2050122	2050108	2050085	2050062	2050057	2050102
	IBS-Special Cleaner Securoil		+	+			2050133	2050076	2050132	2050068	2050067	

All IBS-Special Cleaners based on HC evaporate without residue. The duration of the residue-free evaporation depends on external influences such as temperature and humidity. If you have any questions, please contact our IBS-Consultants.



ACCESSORIES and REPLACEMENTS



All IBS accessories and replacement parts shippable directly from factory!

As manufacturers, we can supply **what** you need, **when** you need it: we will always find a solution to your problem. Our staff is at your service. They will happily answer your questions.

Keep your parts cleaning device running, and running, and running ...

Articles	M	MD	M-500	F2	F2-D	G-50-I	G-50-W	K	KD	KP	BK-50	F	L	A
IBS-Special pump without foot switch	2222013	2222013	2222013	2222040	2222040	-	-	2222041	2222041	2222041	-	2222040	-	2222048
IBS-Special pump with foot switch	2222056	2222056	2222056	-	-	2222089	2222089	2222057	2222057	2222057	2222080	-	2222082	-
Foot switch with hood	2222022	2222022	2222022	-	-	2222022	2222022	2222022	2222022	2222022	2222022	-	2222022	-
Foot switch without hood	-	-	-	2222024	2222024	-	-	-	-	-	-	2222024	-	-
Splashguard	2222066	-	2222066	-	-	-	-	-	-	-	-	-	-	-
Extraction unit	2120013	-	2120013	-	-	-	-	2120017	-	-	-	-	2120029	-
Containment basin	2120022	2120022	2120022	2120021	2120021	2120021	2120021	2120023	2120023	2120023	2120024	-	2120022	-
Cleaning brush, Bristles L/Ø: 55/35 mm fine	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	2222008	-
Cleaning brush, Bristles L/Ø: 55/35 mm coarse	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	2222009	-
Cleaning brush, Bristles L/Ø: 80/35 mm long	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	2222011	-
Cleaning brush, Bristles L/Ø: 54/50 mm broad	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	2222010	-
Cleaning brush, Natural Bristles L/Ø: 60/45 mm	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	2222050	-
Cleaning brush, Natural Bristles L/Ø: 55/35 mm	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	2222002	-
Cleaning brush, Bristles L/Ø: 60/20 mm fine	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	2222003	-
Cleaning brush, Bristles L/Ø: 60/20 mm coarse	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	2222091	-
Brush with screw thread, Bristles L/Ø: 55/35 mm	-	-	-	-	-	-	-	-	-	-	-	-	-	2222051
Support grate Slate grate	2222060	2222060	2222060	2222016	2222016	2222016	-	2222061	2222061	-	-	2222062	2222014	2222020
Support grate Perforated plate	2221000	2221000	2221000	2222021	2222021	2222021	2222019	2222017	2222017	2222017	2222019	2222018	-	-
Protective gloves PU: 5 pairs	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073	2050073
Brush hose, length: 1.5 m	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059	2222059
Return hose	2221012	2221012	2221012	2221012	2221012	2221012	2221012	-	-	-	2221012	2221012	2221012	-

