



IBS-Special Cleaner WAS 40.100

(industrial and workshop floors)



Description

Concentrate on a watery basis · High-performance detergent.
Adapted for use in floor cleaning machines for the effective cleaning and care of industrial, hall and workshop floors of all industries. Also suitable for brush cleaning and wiping application. Removes tire rubber abrasion!

Application

Adapted for use in all conventional floor cleaning machines	Effective when used in high pressure and steam jet cleaning	Optimal results during brush cleaning and wiping

Suitable for

- Basic and maintenance cleaning
- Industrial, indoor and workshop floors
- Sealed and coated floors
- Concrete and smooth floor surfaces
- Ceramic floors, tiles
- Indoor and workshop walls

Removes the following contaminants

- Rubber abrasion from (forklift) tyres, stubborn deposits
- Oil and fat residues
- All kinds of dirt
- Dust

Special features

- Optimal results with low concentration
- Does not foam - includes defoamer
- Dries streak-free
- Anti-slip
- Demulsifying, making it suitable for oil separators

Application method

Conc. 2 - 8%	pH value 13	Streak-free drying	Removes rubber abrasion from tyres	Small %, optimal effect

Recommended dosage


- | | | |
|---------------------------------|------|------|
| · Light to normal contamination | 2-4% | 1:50 |
| · Rough to heavy contamination | 5-6% | 1:20 |
| · Persistent contamination | 7-8% | 1:13 |

Please test the product prior to use in an inconspicuous place.

Available sizes of trading unit



Tip:
Scan
the QR code!

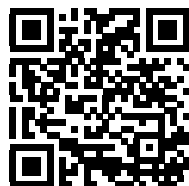

Pictures of the application

