

MOBILE SAND BLASTING MACHINES SOS PSI 151.3/KR32

EKO®

FOR SAND BLASTING WITHOUT CLOUDS OF DUST

*Saves your
breath and money*

Quality of delivery

certificated

CLPR
CERTIFIKACE

ISO 9001

Switch

Exchangeable nozzle
with brush shield

Exhaust chamber

Sand blasting gun

Hose for feed of sand

Bin for sand

Hose for exhaust
of used sand

Power control

Box of drive with
turbine and motor
with cooling bypass



Chassis with handrail
and wheels

APPLICATION:

- for renewal of old surfaces (concrete stairs, fair-faced brickwork etc.)
- for roughing of smooth surfaces (formation antiskid surfaces on polishing blocks etc.)
- for scale removal after plasma cutting
- for renewal of leather (old leather chairs etc.)
- for rust removal from metallic parts
- for look improvement (roughage) metallic parts
- for glass sand blasting

It is necessary to switch on the exhaust before sand blasting(by the switch on the front of machine). It is necessary to be holding the sand blasting gun at bristle's length from sand blasted surface. It is necessary to clean periodically filter (It will be best once per hour).

TECHNICAL DESCRIPTION:

This is sand blasting machine with the integrated exhaust. Sand blasted material is exhausted in conjunction with sand blasting material thru the nozzle with the bristles, that is component of the sand blasting gun.

TECHNICAL DATA:

Turbine with motor	30 V/1200 W
Lead-in cable	5 m
Rate of air flow of exhaust	140m ³ /h
Maximal underpressure	20kPa
Filter area	5 m ²
Consumption of pressured air	300 l/min
Sucking hose	2,5 m
Sand blasting hose	3,5 m
Height x Width x Length / depth	865 x 420 x 585 mm
Weight	80 kg


SAND BLASTED MATERIALS SAMPLES:



Tiles



Facings

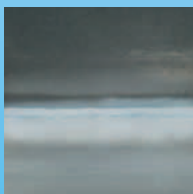

Fillet weld




Welds



Rusted sheet iron



Paints

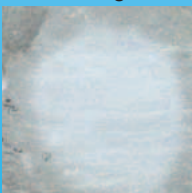


Rendering



Concrete



Glass

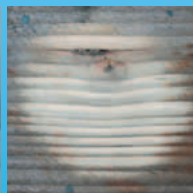

Wood



ŠIMKO s.r.o.

1. máje 2000, 547 01 Náchod

Tel/fax: +420 491 424 280-81

E-mail: ekosimko@quick.cz

www.ekosimko.cz