




IBS-Parts Cleaning Device Type A



Description

Parts Cleaning Device in a flat and mobile design, with four castors, for cleaning directly on the vehicle.

Article-No.

2120101

Brief info load & tank capacity



Function

The IBS-Special Pump with self suction system moves the cleaning fluid from the tank through the hose to the cleaning brush. The soiled liquid goes back to the fluid tank. An extended service life is ensured. It is functional, ecological and works a long time. To change the cleaner just spill. The steerable wheels enable a smooth mobile action and can be fixed at anytime with an EURO-Stop. Possible cleaning of the axle parts in assembled state.

Advantage

- for cleaning of vehicle axles in assembled state
- robust & solid construction
- 3 years warranty for device and pump when used in combination with IBS-Special Cleaning Agents


Technical Data

| | |
|---------------------|----------------------------------|
| Overall dimensions: | 1000 x 750 x 356 mm |
| Work surface: | 850 x 390 mm (inside dimensions) |
| Work height: | 150 mm |
| Load capacity: | 100 kg |
| Tank capacity: | 35 liter max. |
| Power connection: | 230 V, 50 Hz |
| Weight (empty): | 31 kg |





ACCESSORIES

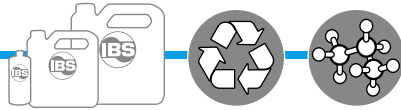


| IBS-Special Cleaner | | fast evaporation | slow evaporation | nearly odourless | mild odour | Available packaging sizes, Article No. | | | | | | |
|---------------------|-------------------------------------|------------------|------------------|------------------|------------|--|---------|---------|---------|---------|---------|---------|
| | IBS-Special Cleaner EL/Extra | + | | + | | 2050149 | 2050121 | 2050113 | 2050128 | 2050105 | 2050061 | 2050101 |
| | IBS-Special Cleaner RF | | + | | + | | 2050124 | 2050097 | 2050129 | 2050056 | 2050059 | 2050263 |
| | IBS-Special Cleaner Purgasol | + | | | + | | 2050122 | 2050108 | 2050085 | 2050062 | 2050057 | 2050102 |
| | IBS-Special Cleaner Securoil | | + | + | | | 2050133 | 2050076 | 2050132 | 2050068 | 2050067 | |

All IBS-Special Cleaners based on HC evaporate without residue. The duration of the residue-free evaporation depends on external influences such as temperature and humidity. If you have any questions, please contact our IBS-Consultants.



ACCESSORIES and REPLACEMENTS



All IBS accessories and replacement parts shippable directly from factory!

As manufacturers, we can supply **what** you need, **when** you need it: we will always find a solution to your problem. Our staff is at your service. They will happily answer your questions.

Keep your parts cleaning device running, and running, and running ...

| Articles | M | MD | M-500 | F2 | F2-D | G-50-I | G-50-W | K | KD | KP | BK-50 | F | L | A |
|---|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| IBS-Special pump without foot switch | 2222013 | 2222013 | 2222013 | 2222040 | 2222040 | - | - | 2222041 | 2222041 | 2222041 | - | 2222040 | - | 2222048 |
| IBS-Special pump with foot switch | 2222056 | 2222056 | 2222056 | - | - | 2222089 | 2222089 | 2222057 | 2222057 | 2222057 | 2222080 | - | 2222082 | - |
| Foot switch with hood | 2222022 | 2222022 | 2222022 | - | - | 2222022 | 2222022 | 2222022 | 2222022 | 2222022 | 2222022 | - | 2222022 | - |
| Foot switch without hood | - | - | - | 2222024 | 2222024 | - | - | - | - | - | - | 2222024 | - | - |
| Splashguard | 2222066 | - | 2222066 | - | - | - | - | - | - | - | - | - | - | - |
| Extraction unit | 2120013 | - | 2120013 | - | - | - | - | 2120017 | - | - | - | - | 2120029 | - |
| Containment basin | 2120022 | 2120022 | 2120022 | 2120021 | 2120021 | 2120021 | 2120021 | 2120023 | 2120023 | 2120023 | 2120024 | - | 2120022 | - |
| Cleaning brush, Bristles L/Ø: 55/35 mm fine | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | 2222008 | - |
| Cleaning brush, Bristles L/Ø: 55/35 mm coarse | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | 2222009 | - |
| Cleaning brush, Bristles L/Ø: 80/35 mm long | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | 2222011 | - |
| Cleaning brush, Bristles L/Ø: 54/50 mm broad | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | 2222010 | - |
| Cleaning brush, Natural Bristles L/Ø: 60/45 mm | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | 2222050 | - |
| Cleaning brush, Natural Bristles L/Ø: 55/35 mm | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | 2222002 | - |
| Cleaning brush, Bristles L/Ø: 60/20 mm fine | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | 2222003 | - |
| Cleaning brush, Bristles L/Ø: 60/20 mm coarse | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | 2222091 | - |
| Brush with screw thread, Bristles L/Ø: 55/35 mm | - | - | - | - | - | - | - | - | - | - | - | - | - | 2222051 |
| Support grate Slate grate | 2222060 | 2222060 | 2222060 | 2222016 | 2222016 | 2222016 | - | 2222061 | 2222061 | - | - | 2222062 | 2222014 | 2222020 |
| Support grate Perforated plate | 2221000 | 2221000 | 2221000 | 2222021 | 2222021 | 2222021 | 2222019 | 2222017 | 2222017 | 2222017 | 2222019 | 2222018 | - | - |
| Protective gloves PU: 5 pairs | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 | 2050073 |
| Brush hose, length: 1.5 m | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 | 2222059 |
| Return hose | 2221012 | 2221012 | 2221012 | 2221012 | 2221012 | 2221012 | 2221012 | - | - | - | 2221012 | 2221012 | 2221012 | - |

