



Our APS vacuum technology is deployed on a wide range of professional dust and fluid vacuum cleaners. Particularly suited to maintenance works and industrial cleaners, APS vacuum cleaners combine vacuum power and robustness with the solid reputation of SIEBEC- **Svs** products.

The APS range is entirely customizable depending on your needs :

- stainless steel tanks of different sizes
- wide range of motors
- ATEX version,
- fluid level sensor,

There is always an APS to meet your requirements. You will also find APS technology for intensive use and very large volumes on our ROLLAIR centralised installation with automated discharge of shavings and fluids.



1 000 BP




305



303 ST



203

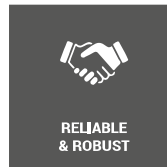

### Other versions

**1** ATEX 21 or 22



305

**2** BIG BAG



**3** BAG Continuous bagging



5 reasons to choose APS




**1**  
**Tangential inlet**  
Cyclonic effect separation



**2**  
**Lockable mobile container**  
Easy maintenance



**3**  
**HEPA filtration as an option**  
**M class filter cartridge**  
**Filter protection**  
By separation chamber

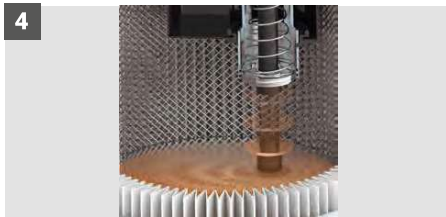

**4**  
**Semi-auto std filter cleaning system**  
By vibration/ automatic E-JET as an option



**5**  
**Ergonomic**  
Accessories holder and storage

**Filtration**

**In option**



**Chips separator basket**  
gravity draining



**Liquid level sensor**  
Wireless, Aqua version



**Coupled floor nozzle**  
600 mm wide with wheels



**Pneumatic motor**  
Venturi



**Dust accessory kit**  
(Ø 40,50 or 60mm)

**1 4 5 6 7**



**Oil and chips accessory kit**

**2 4 5 6 8**



- 1. 3m antistatic hose with fittings
- 2. 3m reinforced polyurethan hose with fittings
- 3. *In option* : Semi-rigid PE pole, 0.9 m long
- 4. Straight PEHD pole Lg 1m
- 5. Flat nozzle, 120mm wide
- 6. Flat tapered nozzle
- 7. Metal floor nozzle with brush + angled metal pole
- 8. Metal floor nozzle with lips + angled metal pole

**Standard APS**

Référence	102 M	202 M	350 D	203	303 ST	305	1 000 BP
<b>Tank - L</b>	25L - Stainless	35L - Stainless	50L - Stainless	35L - Stainless	50L - Stainless	75L - Stainless	100L - epoxy paint
<b>Power - kW</b>	2,2	2,2	3,3 Bypass	3	3	5,5	4
<b>Power supply</b>	230V Singlephase	230V Singlephase	230V Singlephase	3x400V 50Hz	3x400V 50Hz	3x400V 50Hz	3x400V 50Hz
<b>Motor type</b>	Singlephased	Singlephased	Singlephased	Asynchronous	Asynchronous	Asynchronous	Asynchronous
<b>Airflow rate - m³/h</b>	340	340	510	320	320	520	2 200
<b>Vacuum - mm/WC</b>	2 300	2 300	2 300	2 900	2 900	2 900	430
<b>Filter cleaning</b>	Semi-auto	Semi-auto	Semi-auto	Semi-auto	Semi-auto	Semi-auto	Auto
<b>Inlet Ø - mm</b>	40	40	50	40 / 50	50	50 / 60	150
<b>Dimensions - WxDxH mm</b>	480x480x920	500x620x1100	600x800x1180	500x620x1270	600x800x1300	630x800x1800	630x1180x1690
<b>Weight</b>	24	42	65	72	87	151	205

For information on other versions, please contact us