

LAMPO CR *EVX*



STAZ. A



- Stampo regolabile, lubrificato e Air Blow con punzone a stelo corto compatibile MATE e stelo lungo compatibile AMADA
- Guida aperta a 3 riferimenti con estrattore intercambiabile lubrificato e Air Blow.
- Regolazione dell'altezza del punzone senza la necessità di alcun tipo di attrezzo.
- La regolazione avviene attuando il pulsante di sblocco e ruotando il gruppo di estrazione senza estrarre il punzone dalla guida.



- Tool with adjustable and lubricated short and long punch, MATE and AMADA compatibles.
- Open guide with 3 reference and interchangeable Lubricated and Air Blow stripper
- Adjustment of the punch height without the use of any tool.
- Adjustable length using the release button and turning the canister without removing the punch from the guide.


STAZ. B



Serie LAMPO CR EVX Regolabile – LAMPO CR EVX Adjustable Series

Standard – Lubrificato – Air Blow

Standard – Lubrificated – Air Blow

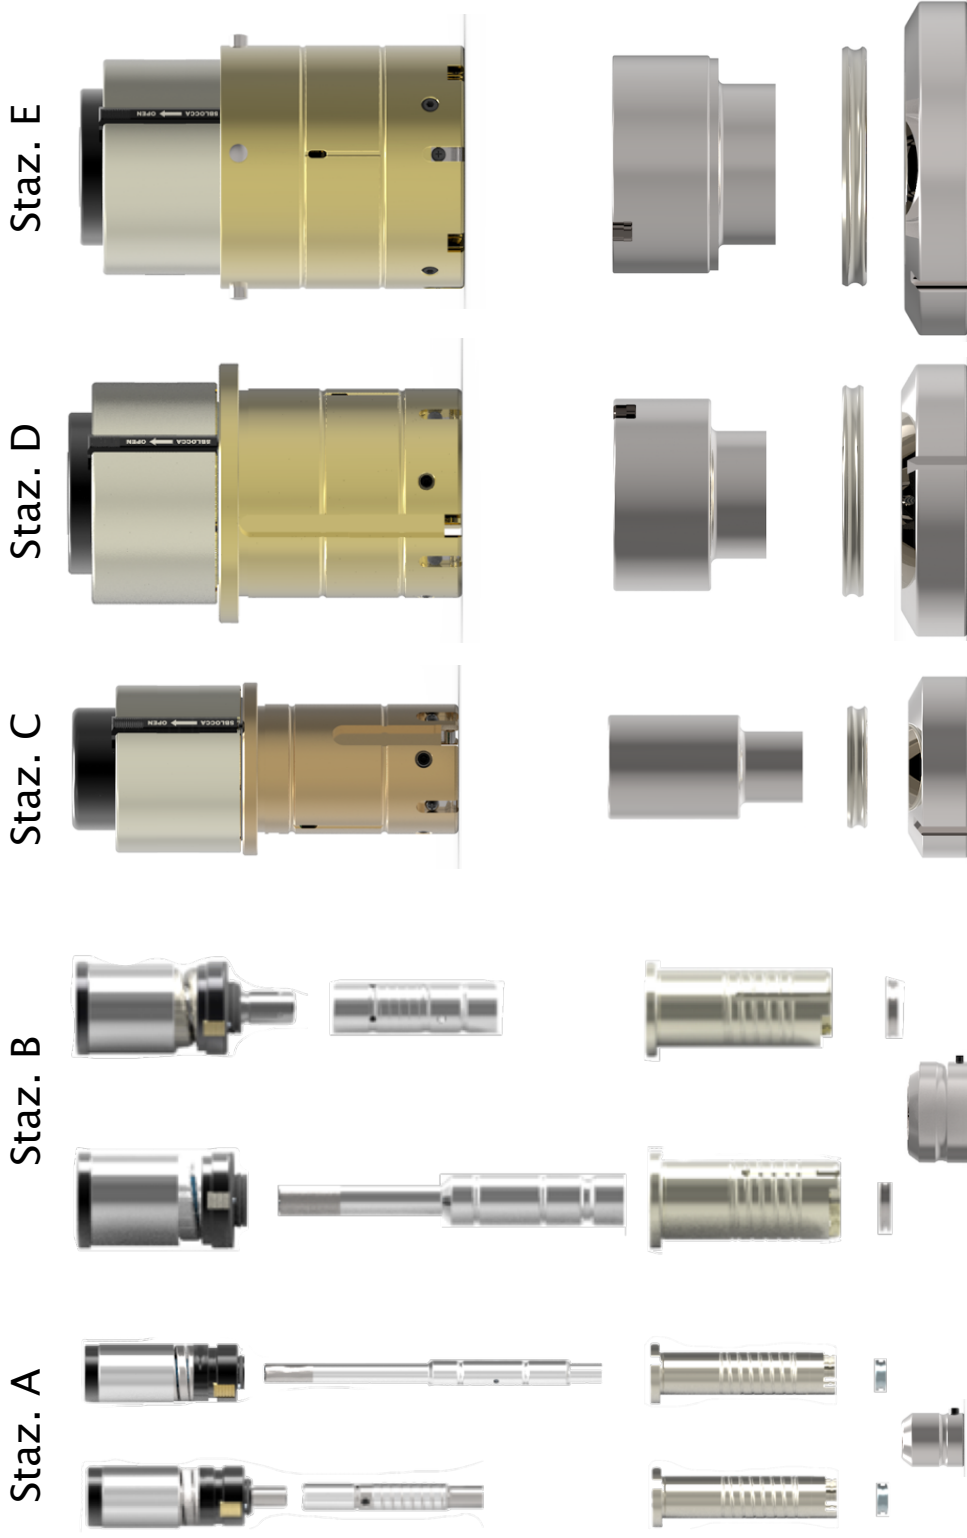

Matrice Antisfrido con 3 riferimenti per stazione A e B e 2 riferimenti per stazione C – D – E in base alla figura
 No-slug Die with 3 keyhole for A and B stations and 2 reference for C – D – E depending on shape